
## PINS & NEEDLES PINSANDNEEDLES.COM

## Face Mask w/ Pocket for Filter





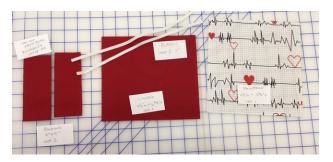

## Supplies:

- Main Fabric 7-1/2"w x 7-3/4"h (cut one)
- Lining Fabric 7-1/2"w x 6-3/4"h (cut one)
- Binding/Casing 2" x 5" (cut two)
- Thin Elastic (no larger than ¼") 11" (cut two)
- Twist tie, picture wire or a paper clip
- Wonder Clips
- Marking Pen
- Ruler
- Scissors

## Directions:

- 1. Serge top edges of front and lining fabric separately. (Fig 1)
- 2. With Right Sides Together serge bottom edge of lining to bottom edge of main fabric. (Fig 2)
- 3. Align the top edge of lining to top edge of main fabric. Mark 1-1/2" in from both sides. (Fig 3) Stitch from raw edge to mark on both sides, leaving the center open (this will become the filter pocket). (Fig 4)
- 4. Press bottom seam to lining side, press top seam (with opening) open. (Fig 5-6)
- 5. Topstitch upper edge of lining (the serged edge). (Fig 7)
- 6. Flip Right Side Out & press flat. (Fig 8)
- 7. Insert twist tie/paperclip or wire into upper part of pocket & topstitch close. (you can also topstitch the ends so the wire/twist tie doesn't slide around in there) (Fig 9-10)
- 8. Serge raw edges or edge stitch all four sides. (Fig 11)
- Make 2-3 pleats, use wonder clips to hold in place. Press pleats on both sides. (Fig 12-13)
- 10. Stitch pleats down close to raw edges (serge if desired) (Fig 14)
- 11. With Lining side up, lay long edge of binding strip along raw edges, folding over the excess. Use Wonder Clips to hold in place. (Fig 15-17)
- 12. Stitch binding to mask using the edge of your presser foot as a guide. (Fig 18-19)
- 13. Clip corners & flip binding to the other side. (Fig 20-21) Tuck ends in & fold raw edge in half way, then fold over again- clip to hold in place. (Fig 22-24) Topstitch close to inner edge leaving the ends open to create the "casing" for the elastic. (Fig 25)
- 14. Using a bodkin or safety pin, slide elastic into casing. (Fig 26) Tie the ends of elastic together then tuck the knot into the casing. (Fig 27-28)
- 15. Shape the wire to fit the bridge of your nose, insert filter in the pocket & you are done! (Fig 29-31)























